
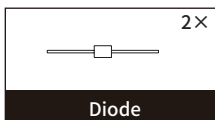
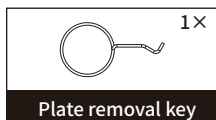
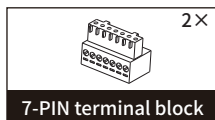
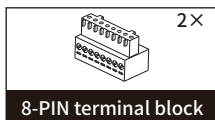
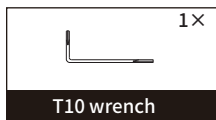
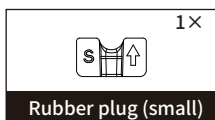
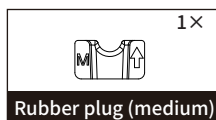
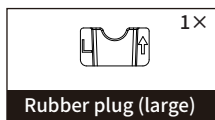
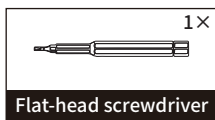
 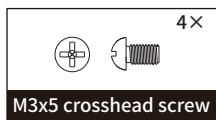
 



## Unpacking

Before using the device, check the device model and ensure that the shipped box includes the following items:




**Optional Accessories:**

 
Wall-mounting Accessories (Please find in On-Wall Installation Kit box):




Wall-mounting box

 


Wall-mounting template

 

ST4x20 crosshead screw

 


Plastic wall anchor

 


M4x30 crosshead screw

 
Flush-mounting Accessories (Please find in In-Wall Installation Kit box)




Flush-mounting box

 


Flush-mounting bracket

 

M4x8 crosshead screw

 

ST4x20 crosshead screw

 

Plastic wall anchor

## Product Overview



Infrared LED

Camera

Photosensitive Sensor

LCD

Microphone

Numerical keypad

Loudspeaker

Card Reader

## Before You Start

### Tools needed

(not included in shipped box)

- Cat Ethernet Cable
- Crosshead Screwdriver
- Electric Drill

### Voltage and Current Specifications

- It is suggested that use PoE+ or 12VDC 2A power adapter to power on device.

### AWG Sizes and Properties Table

Please follow the properly wire data to install device:

Power Supply	12VDC 2A			
AWG	20	22	24	26
Resistance (ohm/km)	33.9	48.5	79.6	128
Cross-sectional Area (mm <sup>2</sup> )	0.5189	0.3247	0.2047	0.1281
Wire Length (m)	≤30	≤20	≤15	\
Wire Length (m) (be external power supply)	≤20	≤15	≤10	\

### Requirements

1. Place the device away from sunlight and light sources to prevent potential damage.
2. Do not place the device in the high-temperature, and humid environments or in surroundings impacted by magnetic field.
3. Install the device on the flat surface securely to avoid personal injuries and property loss caused by device's falling.
4. Do not use or place the device near heating objects.
5. If installing the device indoors, please keep device at least 2 meters away from light, and at least 3 meters away from window and door.



Backlight



Direct sunlight



Direct sun  
through window



Indirect sunlight  
through window



Close to light


**Warning!**

- 1.To ensure safety, avoid touching power core, power adapter, and device with wet hands, bending or pulling the power core, damaging any components, and use only qualified power adapter and power cord.
- 2.Be careful that standing up on the area under the device in case of personal injuries cause by hitting the device.


**Cautious**

- 1.Do not knock device with hard objects.
- 2.Do not press down hard on the device screen.
- 3.Do not expose device to chemical products, such as alcohol, acid liquid, disinfectants, and so on.
- 4.To prevent the device installation from becoming loose, ensure accurate diameters and depths of screw holes. If the screw holes are too large, use glue to secure the screws.
- 5.Use wet cloth clean device surface softly, and then wipe the surface with dry cloth for cleaning the device.
- 6.If there is abnormal situation of the device, including uncommon sound and smell, please power off the device and contact Akuvox Technical Team immediately.

## Wiring Interface

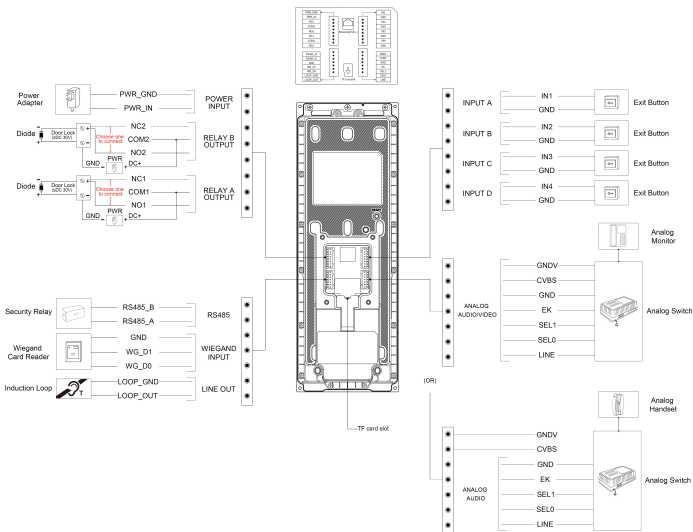

 To protect the device from potential damage caused by over-voltage, it is recommended to wire a diode into the circuit. Connect the anode of the diode to the negative cable of the lock, and connect the cathode of the diode to the positive cable of the lock.




YS5320000

## Installation

### Step1: Wall-mounting Box or Flush-mounting Box Installation


#### 1. Wall Mounting

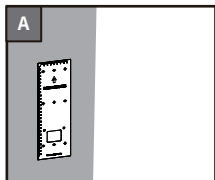


According to the position of the cables on the wall, stick the **wall-mounting template** vertically. Make sure that the cables pass through the cable hole of template.

**Note:**


If you have installed embedded box previously, please align the screw holes of embedded box with the template.

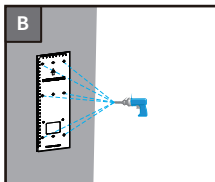

Use a 6mm electric drill to make six screw holes in the locations indicated on the wall-mounting template, each with a depth of 25mm.

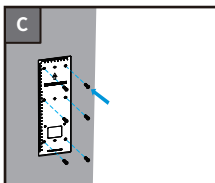


Insert six **plastic wall anchors** into the holes.

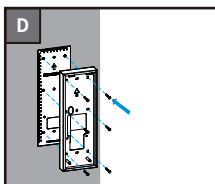


- a. Use six **ST4X20 crosshead screws** to secure the wall-mounting box directly to the wall.
- b. Or, if you have an embedded box, fasten four **ST4X20 crosshead screws** to the wall and attach two **M4X30 crosshead screws** to the embedded box to secure the wall-mounting box.

## 2.Flush Mounting


### 2.1 Normal Installation

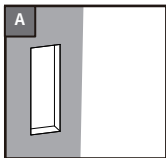


- According to the position of the cables on the wall, cut out a square hole on the wall with the dimension 289\*98\*52.5mm (height\*width\*depth).
- Route all cables outward or reserve a cable tube.

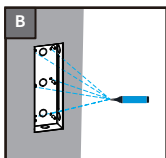


- Break out the round wiring holes and lead wires go through the holes.
- Insert **flush-mounting box** into the square hole.
- Mark six screw holes positions of box.

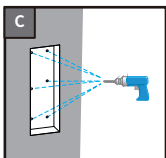

Remove the box and use a 6mm electric drill to drill the six holes with depth of 25mm.

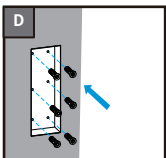

Insert six **plastic wall anchors** into holes.

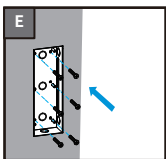


- Place **flush-mounting box** into the square hole, and lead cables out the cable holes of box.
- Use six **ST4X20 crosshead screws** to attach the **flush-mounting box** to wall.

Note:


The flush-mounting box is not positioned higher than wall and its tilt angle of box does exceed than 2°.



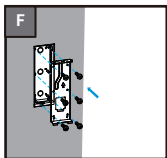


Use six **M4x8 crosshead screws** to fix the **flush-mounting bracket** on the box.


## 2.2 Simple Installation (with lower resistance of vandalism)

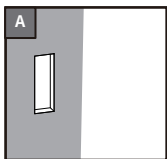

- According to the position of the cables on the wall, cut out a square hole on the wall with the dimension 289\*98\*52.5mm (height\*width\*depth).
- Route all cables outward or reserve a cable tube.

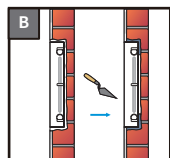


- Fill the gap between the wall and the **flush-mounting box** with cement or non-corrosive adhesive.
- Brush the outer surface of the gap with the same decorative materials as the surrounding walls.
- Wait for the cement to dry before proceeding to the next step.

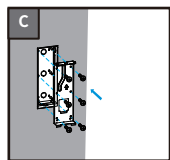

Use six **M4x8 crosshead screws** to fix the **flush-mounting bracket** on the box.


### Step2: Main Unit Installation

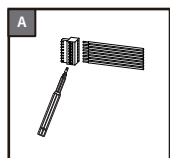


Connect the wires to the **terminal blocks** with **flat-head screwdriver** as needed (for details, refer to "Wiring Interface").

Note:


Strip the wires by removing the plastic sheathing, and make sure the exposed wire ends measure approximately 4-7 mm in length.

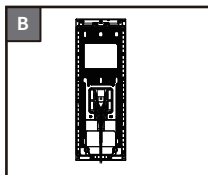

Insert **terminal blocks**, **Ethernet cable**, and **Micro SD Card** to the corresponding interface of device.

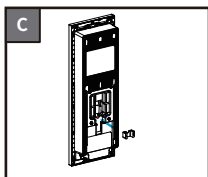

Select and press an appropriate **rubber plug** into the corresponding groove of device.

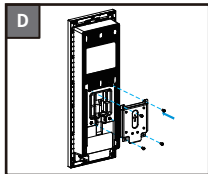


Organize cables and use four **M3x5 crosshead screws** to secure wiring cover to the device.

### Step3: Device Mounting


Wall-mounting

Flush-mounting

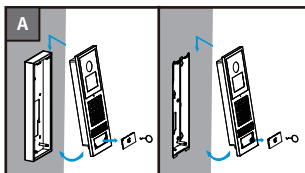


- a. Insert **plate removal key** into the small hole of the **card reader touch plate** to pull out it.
- b. Hang the slots on the back upper part of the device into the corresponding hooks of the mounting box. Snap the device into place and press it down.

Wall-mounting      Flush-mounting

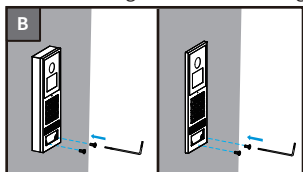


Fix two **M3x9.5 torx head screws** into the holes.

Wall-mounting      Flush-mounting

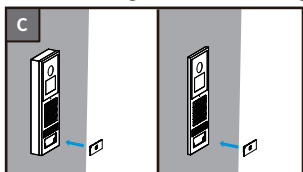


Press the **card reader touch plate** back into its original position.

Note: Check the orientation of the card reader touch plate to avoid installing it in the wrong direction.

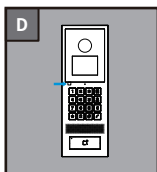

Installation is completed, please remove the protective film.

### Application Network Topology

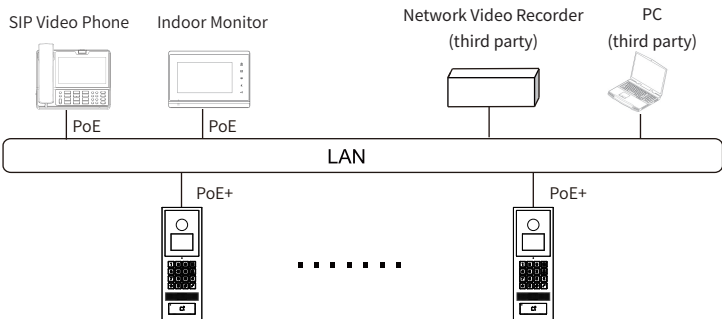

## Device Test

Please verify the device status after installation:

1. **Network:** Press \*2396# to access settings page. Then press **1** to check the device's IP address and network status on **System Information** page. Network is working properly if the IP address is obtained.
2. **Intercom:** Dial the IP or SIP number and press **Dial** key to make a call. Or, press APT number to call. The call configuration is correct if the call is successful.
3. **Access Control:** Use pre-configured PIN code, RF card, and face to unlock door.


## Warranty

1. Akuvox warranty does not cover intentional mechanical damage or destruction caused by improper installation.
2. Do not attempt to modify, alternate, maintain, or repair device by yourself. Akuvox warranty does not apply to damages caused by anyone who is not representative of Akuvox or an Akuvox authorized service provider. Please contact Akuvox Technical Team if the device .

## Get Help

For help or more assistance, contact us at:

 <https://ticket.akuvox.com/>

 [support@akuvox.com](mailto:support@akuvox.com)

Scan the QR code to get more videos, guides, and additional product information.



## Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <http://www.akuvox.com> © Copyright 2023 Akuvox Ltd. All rights reserved.